



## CONTENTS

---

Round mirror 16"

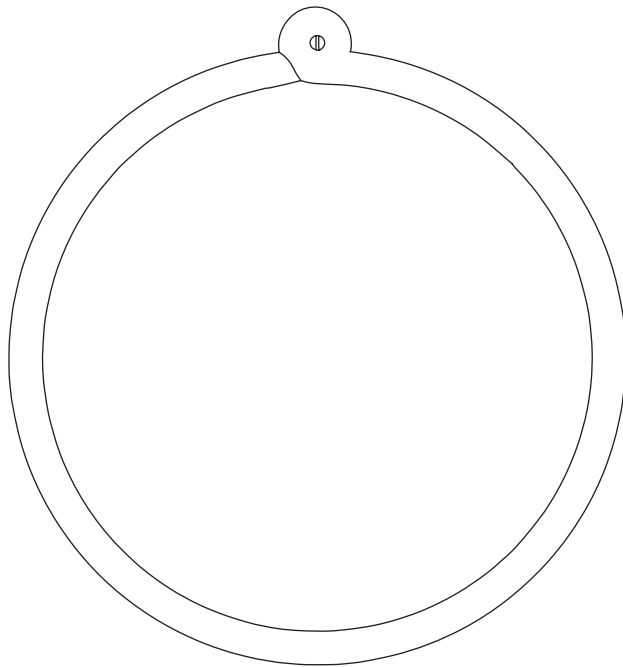

(x1) Drywall Anchors



(x1) Wood Screws



EXTRA HARDWARE:

(x1) Drywall Anchors

(x1) Wood Screws



## RECOMMENDED TOOLS

---

Flat head  
screw driver




Drill



1/8" Drill bit



5/16" Drill bit



Pencil



## SAFETY INFORMATION

---

The Hardware included with this item is meant for drywall or stud mounting only.

Always consult a licensed professional when hanging large mirrors.

Wear full-length clothing and enclosed shoes. If an accident occurs, your body should be protected from getting cut by shards of glass.

Don't carry glass/mirrors over your head.


## KNOT ROUND MIRROR | WALL INSTALLATION

---

3. For a wall made of load bearing material, pre-drill two 1/8in size holes on the marks.  
To ensure a smooth installation, use a screw driver to insert, then remove the screws
4. Fit the mirror knots (A) over the predrilled hole (B) on the wall,  
and use a flat head screw driver on wood screws (C) to secure the mirror.

**WARNING:**

**DO NOT OVER-TIGHTEN THE SCREWS** - If screws are too tight, the wood knots may snap.  
**DO NOT USE A POWER DRILL ON SCREWS**

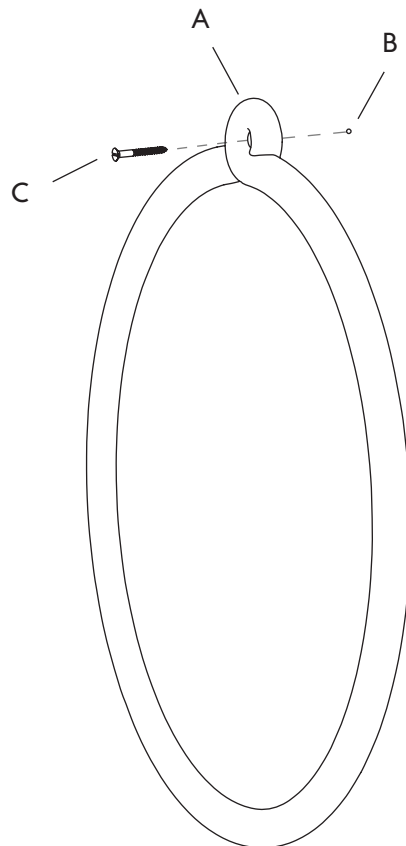

## KNOT ROUND MIRROR | WALL INSTALLATION

---

5. For wall made of non-load bearing material, pre-drill two 5/16in size hole on the mark for provided anchors.
6. Insert the anchor (D) into the predrilled hole (B), then fit the mirror knot (A) over the hole on the wall, and use wood screws (E) to secure the mirror to the wall.

**WARNING:**

**DO NOT OVER-TIGHTEN THE SCREWS - If screws are too tight, the wood knots may snap.  
DO NOT USE A POWER DRILL ON SCREWS**

