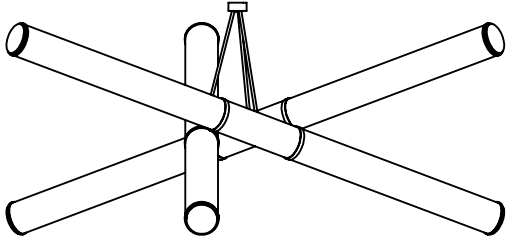





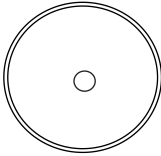


CONTENTS

<div>Mini Farrago Pendant 02</div> 	<div>Stem and Threaded Tube</div> 	<div>Crossbar</div>  <div>8-32 Screws (2)</div> 
	<div>Hangstraight &amp; Threaded Ring</div> 	<div>1/4 IPS Nipple</div> 
	<div>Canopy</div> 	

SAFETY INFORMATION


Only suitable for direct mounting on non-combustible surfaces.  
Under no circumstances can Mini Farrago fixtures be mounted on normally flammable surfaces.  
Suitable for dry, indoor use only.  
Maximum ambient temperatures: 25° C

## CEILING INSTALLATION | MINI FARRAGO PENDANT 01, 02

---

*Note: Please contact a licensed electrician.*

1. Pull power wires up through threaded tube (C) and then fasten into threaded plate (D). See instructions on following page for customizing length of threaded tube (C)
2. Once threaded tube (C) is securely fastened into threaded plate (D), carefully drop cover tube (A) over threaded tube (C) and clamp down by threading hang straight onto top of tube.
3. Close the assembly by dropping cover (B) down cover tube (A).

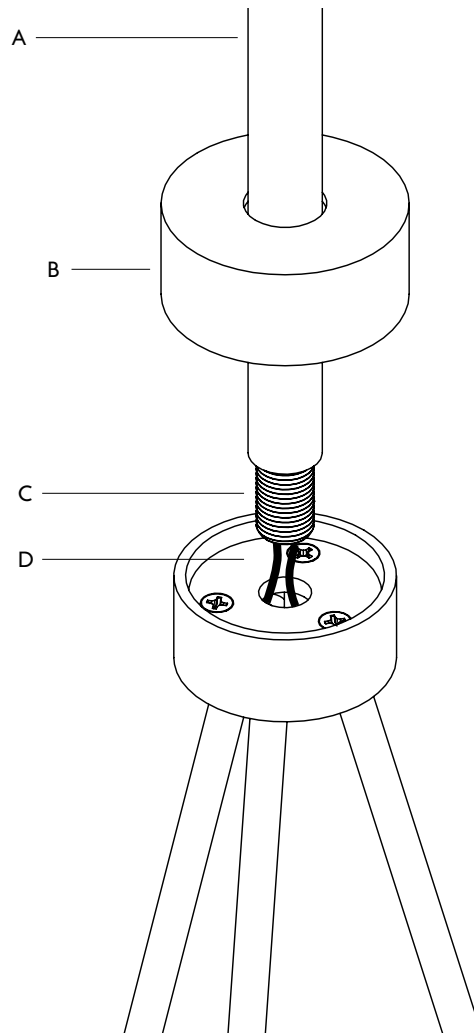


## CEILING INSTALLATION | MINI FARRAGO PENDANT 01, 02

*Note: Please contact a licensed electrician.*

*Note: Do not use bulbs that exceed 20 watts.*

1. To customize the length of the provided 36-inch stem, cut cover tube to desired length. Then cut the inner threaded tube so that it remains 1/2" longer than the cover tube.

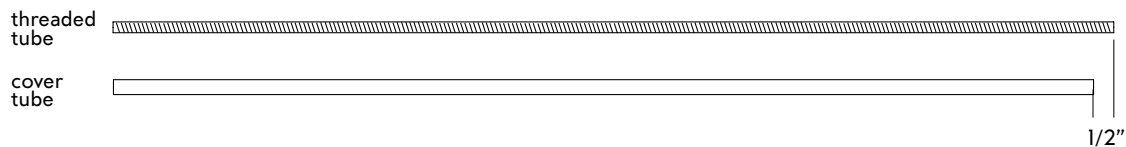

2. Thread one end of the threaded tube about a quarter inch into the top of the fixture. Feed the lead wires through to the top. Then slide the cover tube over the threaded tube.

3. Slide hangstraight nut (E) and canopy (D), open side up, onto cover tube. Leave suspended until step 7.

4. Thread one end of the hangstraight (A) onto the other end of the threaded tube, until cover tube is held tightly in between.

5. Screw 1/4 IPS nipple into other side of hangstraight, and screw crossbar (B) on to nipple.

6. Install crossbar (B) to junction box (C) using provided 8-32 machine screws.

7. Make lead wire connections (F) and tuck into junction box.

8. Raise the canopy and the hang-straight nut to the ceiling. Thread the nut onto the hang-straight, tightening the canopy flush to the ceiling.

